

## CHECKING THE SAW ARM BEARINGS ON AN APOLLO SAW

Symptoms that you have problems with the bearings on your saw  
The saw head is drooping when pulled out cutting into the bench  
The saw is unstable and feels wobbly especially on long lengths  
The saw is not retracting back to the rest position easily  
Saw does not pull smoothly

How to check the arm bearings on the saw

**Ensure the saw is isolated before attempting the following procedure**

Pull the saw head out and attempt to lift the saw head up the saw will have a small amount of normal flex but there should be no clunking in the movement.



Move the saw from left to right again checking for clunking movements



If there is clunking when you try to move the saw head then you will need to inspect the elbows in the arms, this may take two people, one to move the saw and one to inspect the elbows. You are looking for sideways movement between the surfaces indicated below. Make sure to inspect all six elbows.

